



7100R RIM EXIT DEVICE-REVERSIBLE INSTALLATION INSTRUCTIONS LHR door shown , RHR door opposite

10101 ZINS-R7003-00

For steel prepared doors , drill / tap and use supplied machine screws.
For thin gauge metal , non-prepared doors and wood doors use wood screws.

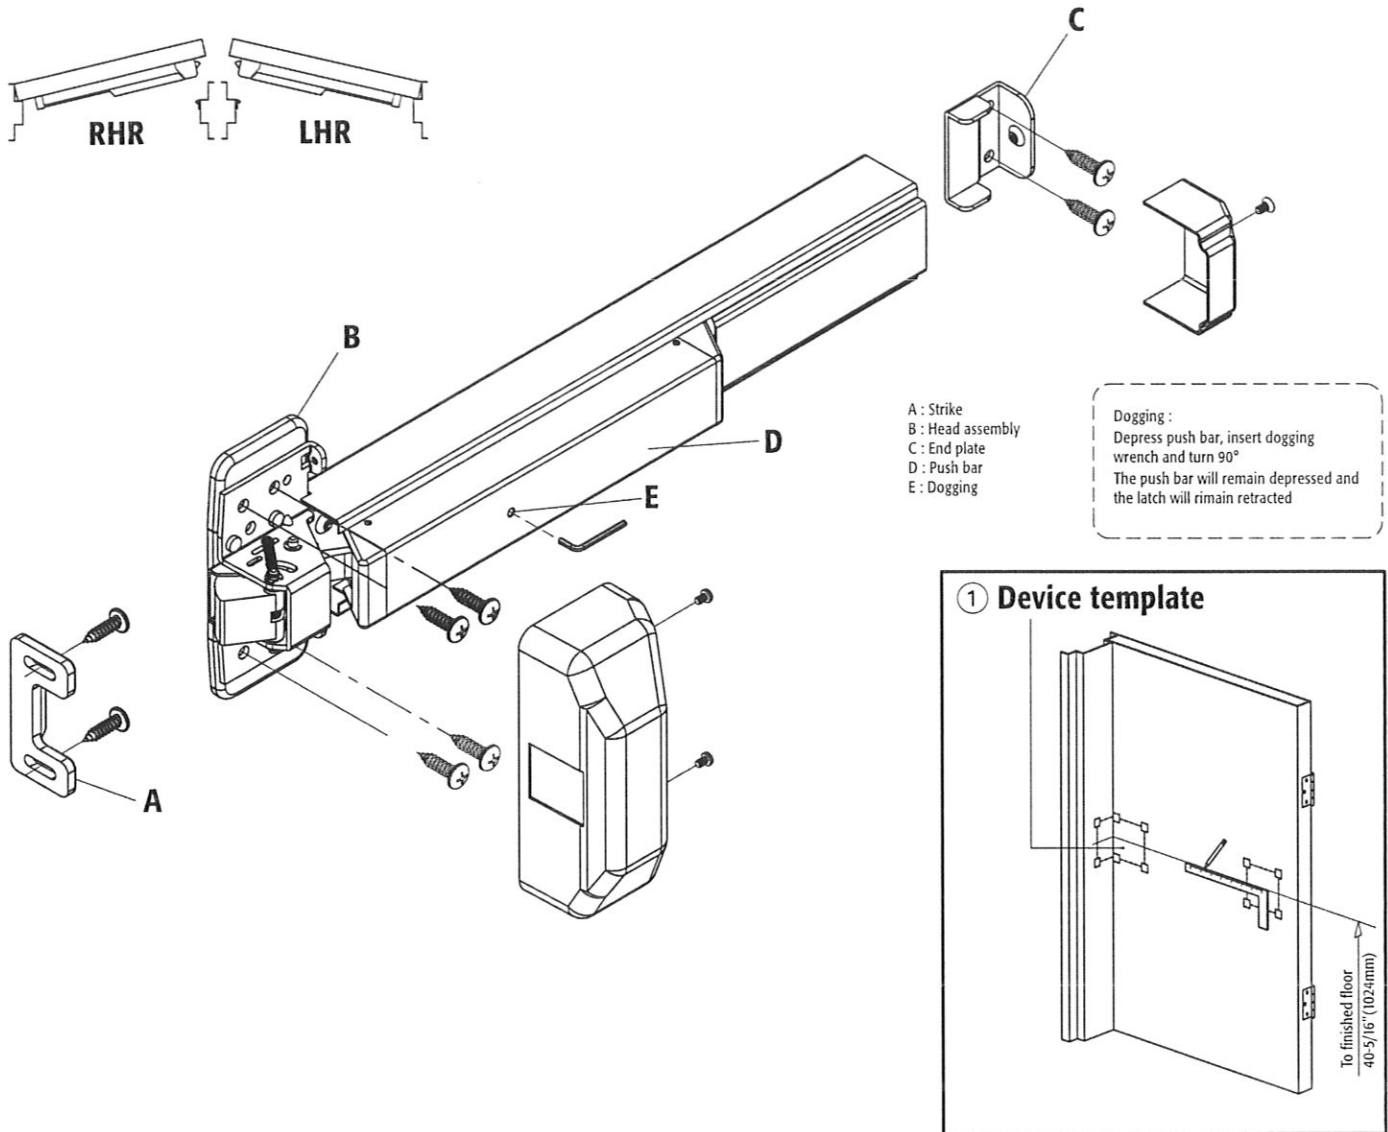


② Strike Install

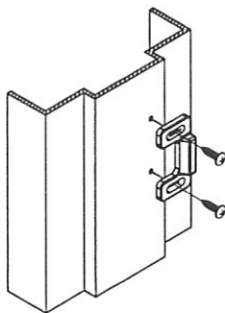


Install the strike to the frame with 2 screws as shown

③ Head assembly and end plate Install

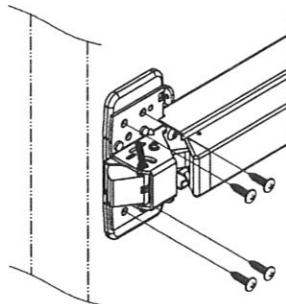

Step 1:
Install the head assembly to the door with 4 screws as shown

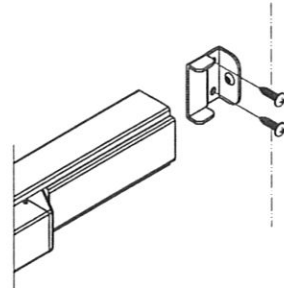

Step 2:
Install the end plate to the door with 2 screws as shown

7100R Rim Safety Rated Panic Device Template

10101 ZINS-R7004-00

